

CEILING VENT KS-V31G

NASTA

Installation Instructions

 Safety Precautions (please observe)

Note:


The main body of the vent is to be fixed to the ceiling.
Securely install parts.

Installation is prohibited for:


Locations too hot (40° or higher),
Humid or wet locations,
Locations where the product can be stepped on

(Installation Method)


1. After ducting is installed, insert the vent body into the duct and secure with tape. wrap the tape around joint twice without any gaps so there is no air leakage.

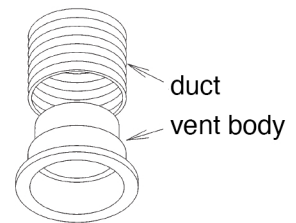

2. Drill a hole in the ceiling board (or floor) with diameter 110-120mm


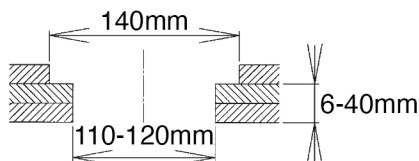


- If the total ceiling thickness exceeds 40mm, make the hole in two steps

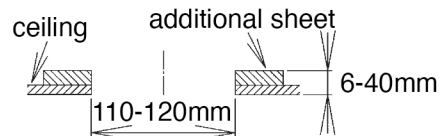


- If ceiling thickness is less than 6mm, install additional sheet to ensure total ceiling thickness is between 6mm and 40mm


When installing into ceiling with airtight building paper, cut hole as below:

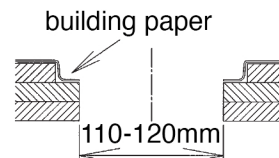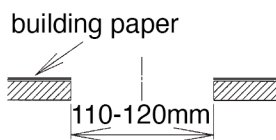

3. Align the vent body with the duct hole and insert the underplate from beneath the ceiling.
Align the claws so the underplate engages with the vent body and ensure it is inserted all the way

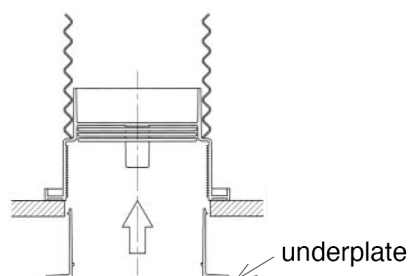


4. Insert the louvre into the underplate and turn it to the right to fix into place.
 Fix securely until the louvre does not turn any further.

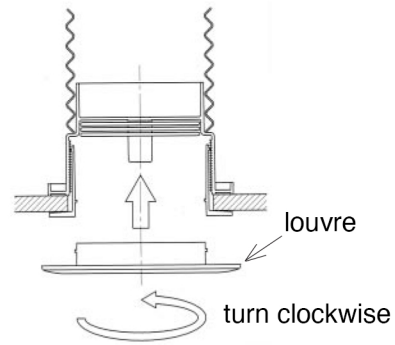


(Air Volume Adjustment Method)

1. Turn the louvre counterclockwise to remove it from the underplate

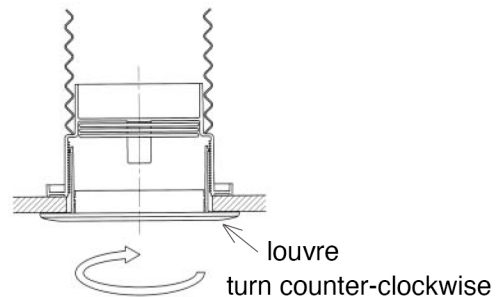


2. Lightly hold the knob on the air control adjustment section of the vent body and turn it clockwise to adjust

setting 3

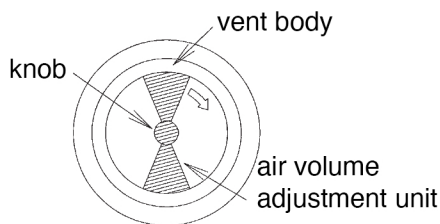


All control plates overlap (product shipped in setting 3)

setting 1

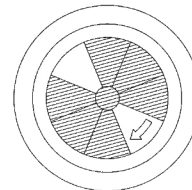


Rotate knob 90 degrees until the unit clicks two times

setting 2

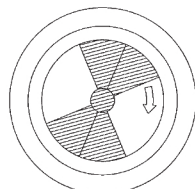

Rotate the knob 45 degrees until the unit clicks one time

setting 4

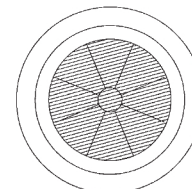

Rotate the knob 135 degrees until the unit clicks three times

3. Re-insert the louvre into the underplate and turn it clockwise to fix into place. Please ensure the louvre is fixed securely.

NASTA

株式会社 キョーワナスタ

本社	〒103-0006 東京都中央区日本橋富沢町12番16号 (ナスタビル2F)	TEL.03-3660-1815(代)
東京支店	〒103-0006 東京都中央区日本橋富沢町12番16号 (ナスタビル2F)	TEL.03-3660-1815(代)
PL室	〒361-0021 埼玉県行田市富士見町1丁目17番地	TEL.048-556-5164(代)
大阪支店	TEL.06-6858-5671(代)	名古屋支店 TEL.052-242-2272(代)
札幌支店	TEL.011-741-2250(代)	北陸営業所 TEL.0766-21-7100(代)
仙台支店	TEL.022-222-5155(代)	広島支店 TEL.082-249-4651(代)
北関東支店	TEL.048-553-1751(代)	福岡支店 TEL.092-472-1088(代)
横浜支店	TEL.045-474-0631(代)	神戸営業所 TEL.078-578-8611(代)
	トータルサイン事業部	TEL.03-3660-1781(代)

ホームページアドレス <http://www.nasta.co.jp/> E-mail info@nasta.co.jp